



Rev 110719

Manufactured in the USA



**sb tactical**  
[BRACE YOURSELF]®



For more information,  
visit [sb-tactical.com](http://sb-tactical.com)

## HK and B&T INSTALLATION INSTRUCTIONS

HKPDW™, SBT5A™, SBT5KA™, SBT™ & SBTi™



**sb tactical**  
[BRACE YOURSELF]®

SB Tactical® strongly recommends a certified armorer or gunsmith install this part. If you choose to install the brace by yourself, please visit our website at [sb-tactical.com](http://sb-tactical.com) for video reference.

[sb-tactical.com](http://sb-tactical.com)



**PISTOL STABILIZING BRACE**®

## WARRANTY

SB Tactical warrants its products to be free from defects in materials and workmanship under normal use for (1) year from date of purchase. If you believe this product has any defects in materials or workmanship, cease use immediately and contact [support@sb-tactical.com](mailto:support@sb-tactical.com).

For complete information on compliance, warranty, and returns, visit [sb-tactical.com](http://sb-tactical.com)



**JOIN OUR EMAIL LIST**  
for the latest news on new products  
and special offers!

Visit  
**[sb-tactical.com](http://sb-tactical.com)**

# HK and B&T INSTALLATION INSTRUCTIONS

HKPDW™, SBT5A™, SBT5KA™, SBT5KA™, SBT™ & SBTi™

## HKPDW™, SBT5A™ and SBT5KA™ for HK Platforms

After reviewing the following instructions, if you are not comfortable with the steps required, SB Tactical® strongly recommends that a certified gunsmith perform the installation.

The HKPDW and SBT5A fit most MP5, HK53 and MP5K Reverse Stretch clones. The SBT5KA fits the MP5K, SP89, and SP5K clones. Neither brace will fit 30 caliber platforms. HK clones often do not have the same tolerances as original HK guns. The locking pins for the end plates may not align or the adapter may seem too tight to fit. If this is the case, installation by a gunsmith may be required.

### OPTIONAL FOR INSTALLATION

- Non-marring punch
- Non-marring hammer

1. Physically and visually check that the pistol is unloaded and send the bolt forward into battery.
2. Remove the end plate locking pin(s), then remove the end plate.
3. For HKPDW, remove the brace/rod assembly by pressing the housing lever. Install the housing over the receiver cavity. Reinsert the brace/rods into the housing assembly. For the SBT5A, install the brace with adapter over the receiver cavity. For the SBT5KA, insert the brace with adapter into the receiver cavity. You may need to tap the brace into place using a non-marring hammer.



4. Replace the end plate locking pin(s).



5. For HKPDW, tighten the set screw at the underside of the housing. Set screw should be tight enough to prevent brace removal but not so tight that the lever is locked.
6. Function check the pistol.

### HELPFUL TIPS

- There are greater tolerance issues with MP5 (single pin) than MP5K (2 pin)
- Minor fitting may be required by a certified gunsmith
- Tension is controlled via the hinge bolt

## SBT™ and SBTi™ for B&T APC and HK UMP

1. Physically and visually check that the pistol is unloaded and send the bolt forward into battery.
2. Remove the receiver hinge bolt (The hinge bolt is part of the firearm receiver and is not included with the brace).
3. Insert the brace into the receiver cavity.
4. Insert the hinge bolt and tighten.
5. Function check the pistol.

### HELPFUL TIPS

- The SBT and SBTi are compatible with B&T APC series pistols and HK UMP clones
- Brace tension can be controlled by the hinge bolt

### REQUIRED FOR INSTALLATION

- 3.5mm Hex Wrench



**SB Tactical**  
[BRACE YOURSELF]